

Printer cable for Epson LX-300 printer

DirectTouch panel CH1

LX-300 25 pin D-SUB connector

Pin#	
1	FG
2	TXD
3	RXD
4	RTS
5	CTS
6	--
7	SG
8	--
9	5V

Pin#	
1	FG
2	TXD
3	RXD
4	RTS
5	CTS
6	--
7	SG
8	--
9	--
10	--
11	R.C.
12	--
13	--
14	--
15	--
16	--
17	--
18	--
19	--
20	DTR
21	--
22	--
23	--
24	--
25	--

