



APPLICATION NOTE

This information provided by Automationdirect.com Technical Support Team is provided "as is" without a guarantee of any kind. This document is provided to offer assistance in using our products. We do not guarantee that the contents are suitable for your particular application, nor do we assume any responsibility for applying the contents to your application.

Subject: Adjusting the Dial Angle of 5-inch Bi-Metal ProSense Thermometers


Number: AN-SEN-012

Date Issued: 10/19/11

Revision: Original

After mounting your ProSense Thermometer you can adjust the angle of the dial face as follows:

Step 1

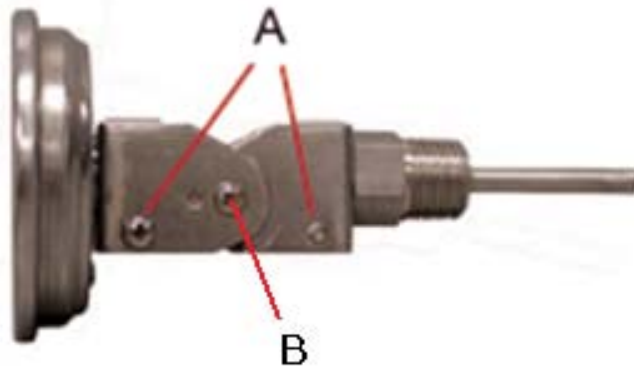

Loosen but do not remove the two- clamp retaining screws labeled "A" and the angle adjustment screw labeled "B".

Step 2



Note: The clamp can be rotated as shown below only when probe is perpendicular to the dial face as shown above.

Never rotate the clamp when it is in the angled position.



Rotate the clamp and adjust the angle of the dial face to the desired position and tighten all of the screws to secure.

Technical Assistance

If you have any questions regarding this Application Note, please contact Technical Support at 770-844-4200.